



Technology Guarding(TG) 사용법

Date: 2016-01-05

We reserve the right to change the content of this manual without prior notice. The information contained herein is believed to be accurate as of the date of publication, however, B&R makes no warranty, expressed or implied, with regards to the products or the documentation contained within this document. B&R shall not be liable in the event if incidental or consequential damages in connection with or arising from the furnishing, performance or use of these products. The software names, hardware names and trademarks used in this document are registered by the respective companies.

I Versions

Version	Date	Comment	Edited by
1.0	Jan 5, 2016	First Edition	Eun Im

Table 1: Versions

II Distribution

Name	Company, Department	Amount	Remarks

Table 2: Distribution

III Table of Contents

1 TG 사용법	4
1.1 준비물	4
1.2 설정하기.....	4
1.3 라이선스 다운로드하기	7

1 TG 사용법


1.1 준비물

- OTG1000.01 1 개
- TG 에 포함할 라이선스
- TG 를 다운로드할 수 있는 계정
- Automation Studio version: AS4.1 이상 (Tested: AS4.2.4)


1.2 설정하기

1) Technology Guarding 실행하기


a. (방법 1) Automation Studio 에서 Tools > Technology Guarding 클릭

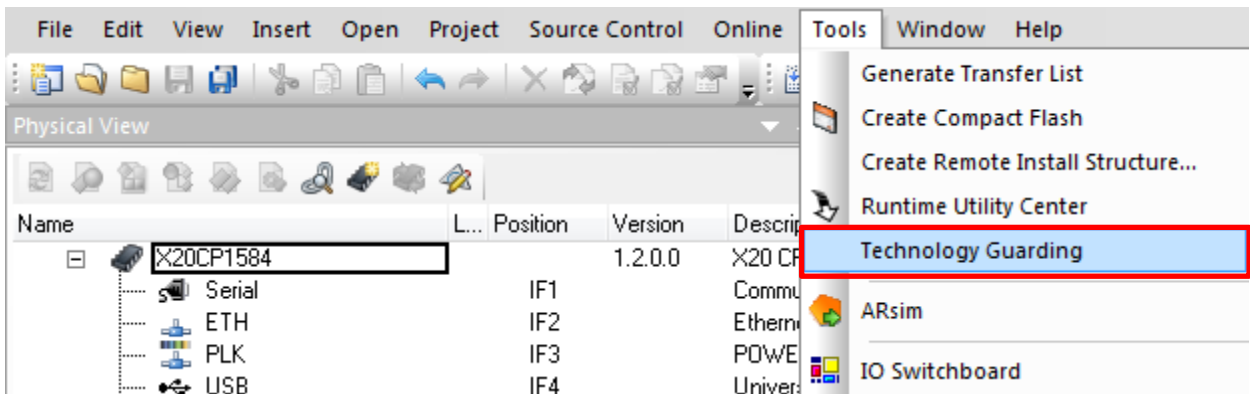


b. (방법 2) Windows 에서 B&R Automation > Technology Guarding > Technology Guarding 클릭

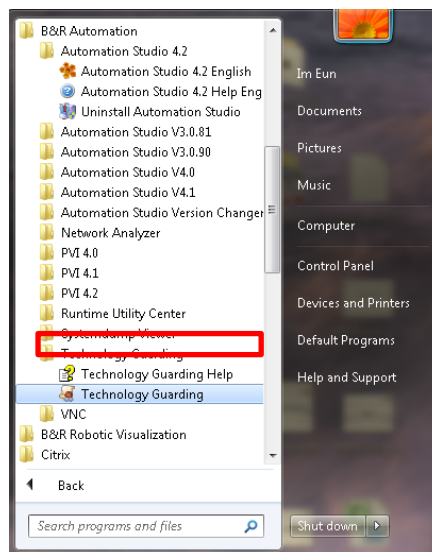


2) Change options...선택 (좌측 하단 파란색 글자)

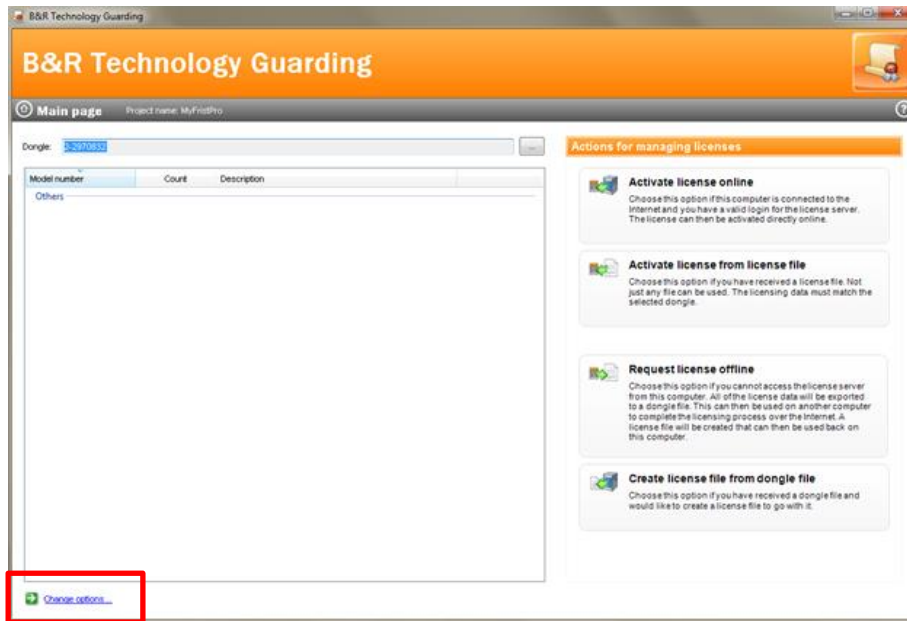

3) B&R License server(HTTPS) 선택

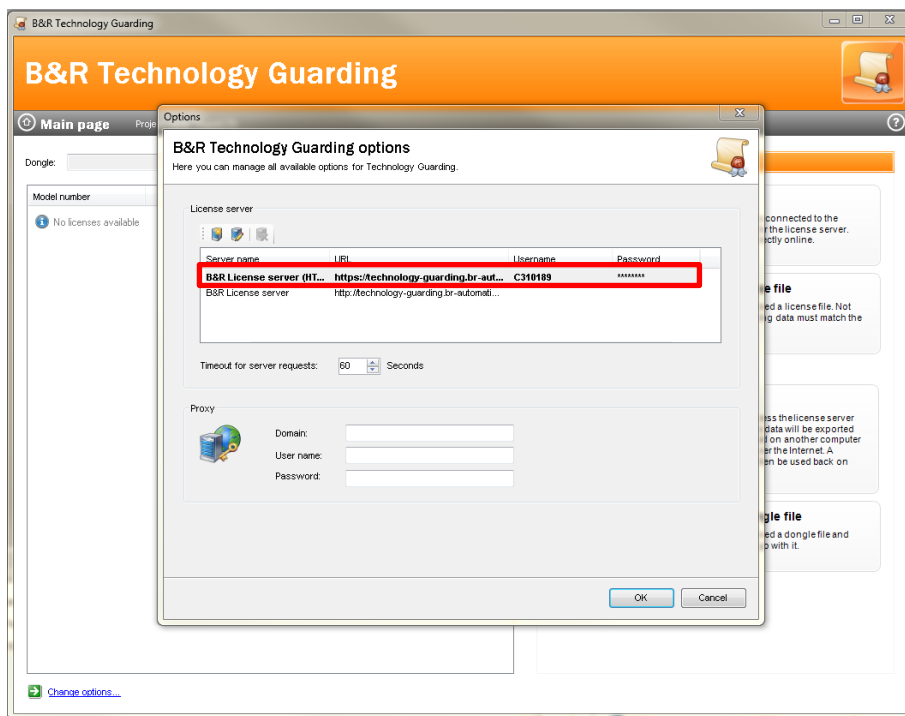


4) 아이디와 패스워드 입력

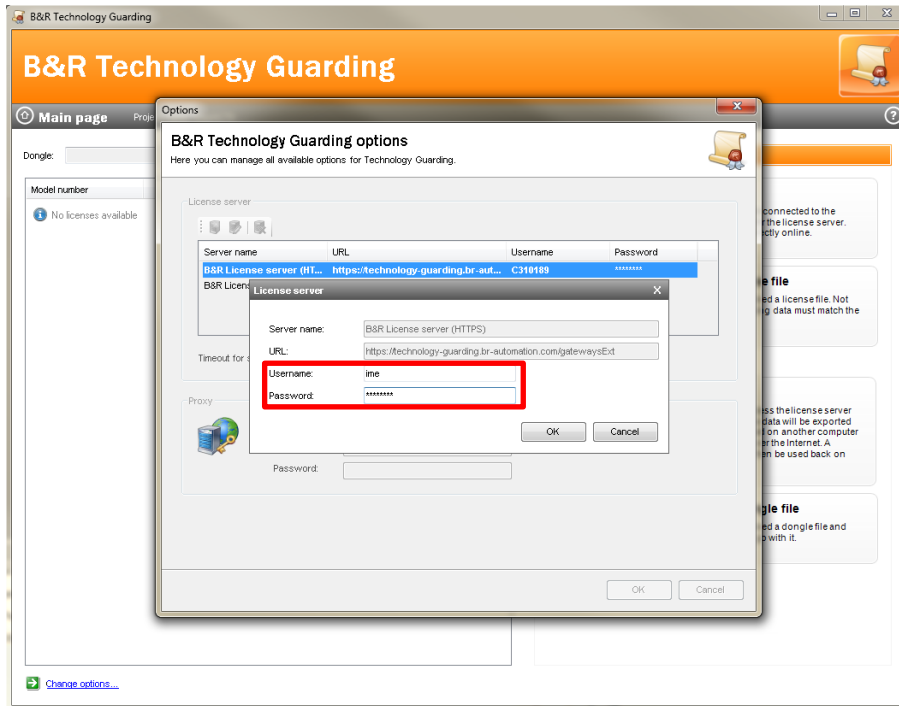


5) 아이디와 패스워드 업데이트 확인

※ 서버 연결이 불안정할 경우 Timeout for server requests 시간을 증가시킬 것

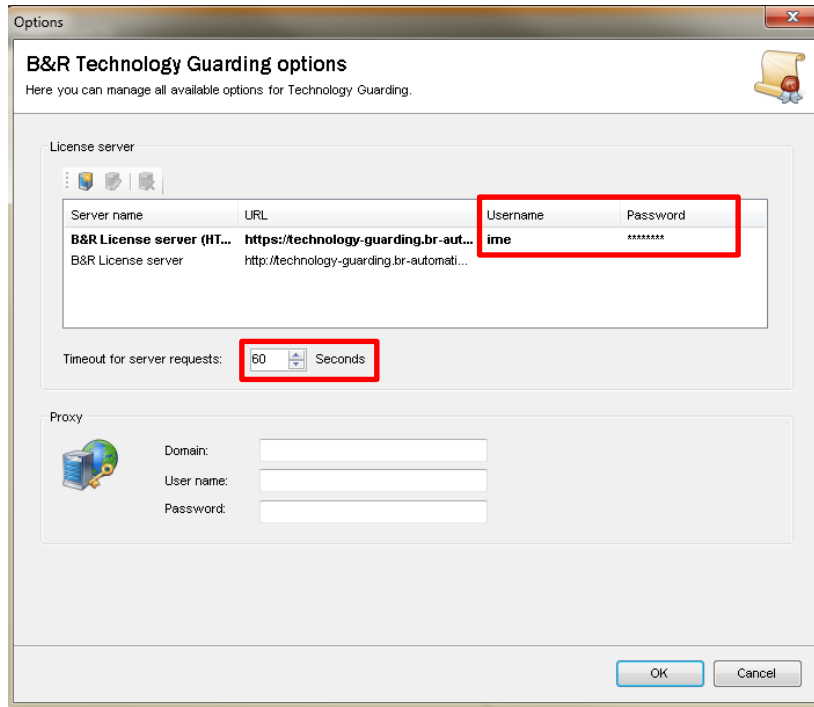


1.3 라이선스 다운로드하기


1) 'Activate license online' 선택

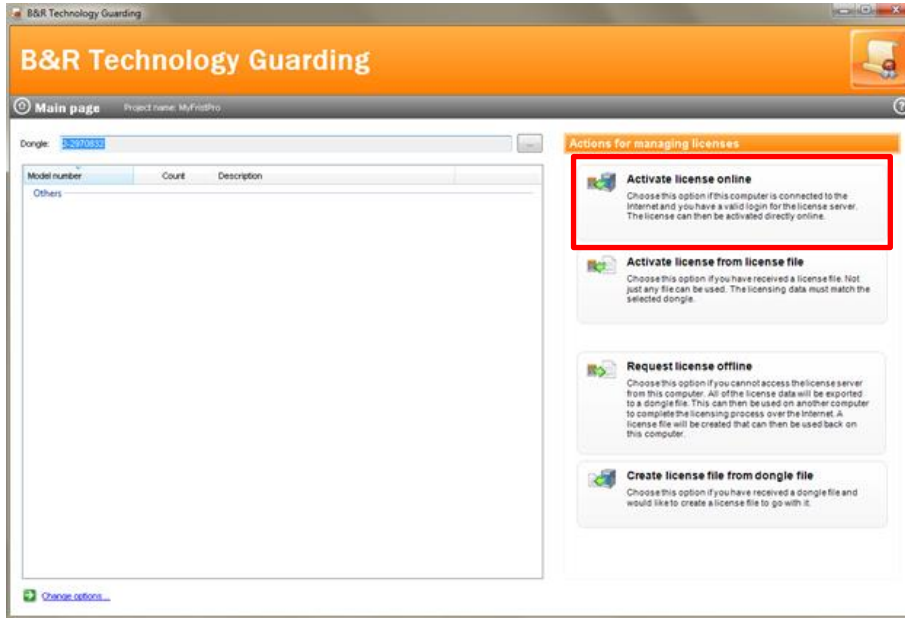

2) 필요한 라이선스를 서버에서 선택

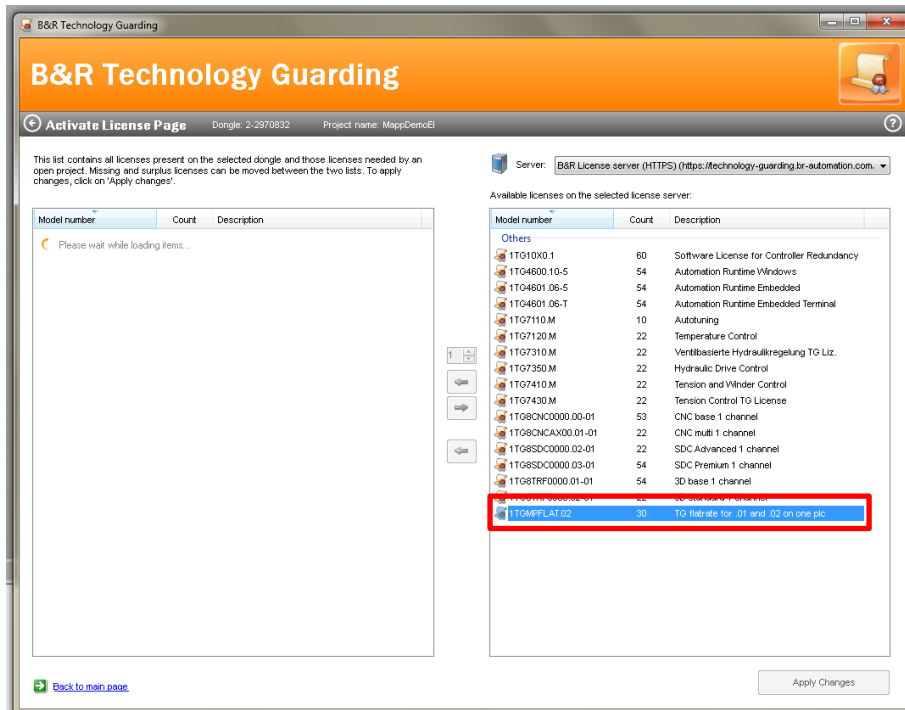

3) 가운데 화살표(←) 클릭

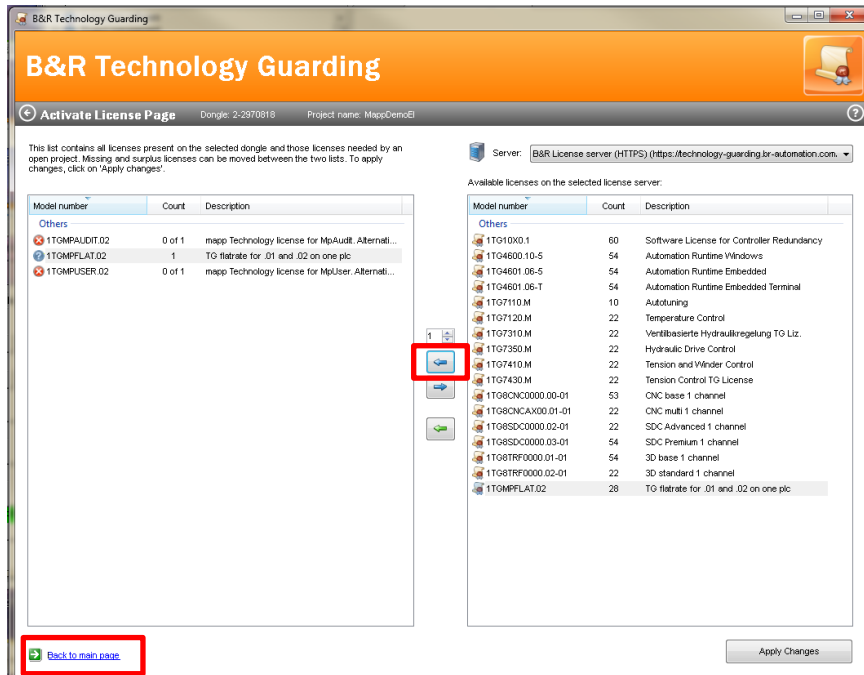

4) Back to main page 를 클릭하여 TG 에 들어있는 라이센스 목록 재확인

